
FOR ALL VEHICLES WITH HWH AIR LEVELING SYSTEMS

ATTENTION !

**PLACE THIS WARNING STICKER
WHERE IT CAN BE EASILY SEEN
BY A TOW VEHICLE OPERATOR**

ON ANY MOTOR VEHICLE WITH AN HWH AIR-LEVELING SYSTEM, THE VEHICLES AIR BAGS WILL NOT INFLATE AS LONG AS THE IGNITION KEY IS IN THE "OFF" POSITION. CONSEQUENTLY, IF THE VEHICLE SHOULD EVER REQUIRE EMERGENCY TOWING, THE IGNITION KEY MUST BE LEFT IN THE "ON" POSITION IN ORDER TO BUILD AND STORE AIR IN THE SUSPENSION. IN ADDITION, THE IGNITION MUST BE LEFT IN THE "ON" POSITION WHEN ADJUSTING THE HEIGHT CONTROL VALVES.

