

HWH® Air Seals for Slide-Out Rooms



Air seals are made of an inflatable seal that goes around the perimeter of a slide-out room to provide a superior seal against the outside elements.

Air is forced into the seal after the room has been fully extended or retracted. Before the room can be extended or retracted the air seal has to be deflated. HWH® air seals are pressurized by their own small air compressor and tank. With HWH® room systems, the room control key has to be on to evacuate air from the seal and operate the room. After a timed delay, the room panel will indicate the room is ready to operate. The room will not operate until the panel indicates the air seal is deflated and it is safe to operate the room without damaging the air seal. The air seal will inflate when the room control key switch is turned off or if the ignition switch is turned off.

Please contact sales at HWH® for more information or a sample air seal.



Web Video
www.hwh.com/ml44156.wmv



Improving Your RV Experience 1967

2096 Moscow Road, Moscow, IA 52760 | Phone: 800-321-3494 | Fax: 563-724-3408 | www.HWH.com