

HWH CONTROL UNIT | ELECTRONIC


"CONTROL BOX/ENC ASSY"

325A SERIES

COMPUTER / TOUCH PANEL-CONTROLLED LEVELING SYSTEMS (Air, Hyd & Air/Hyd)
METAL/PLEXI GLASS BOX | 8.50" x 11.50"

(File: MR153150.DOC | Revised: 07JUN18)

[Print Friendly PDF File](#)

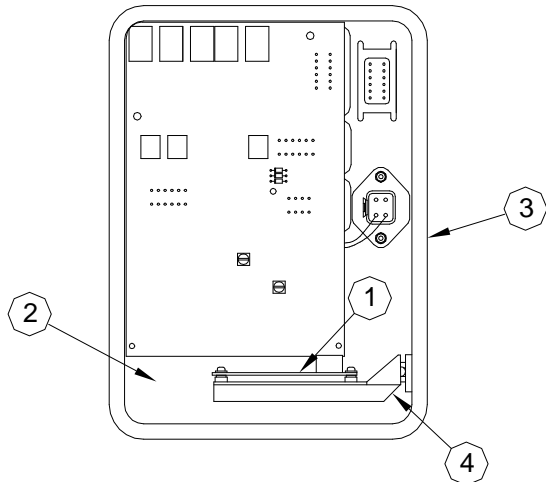

REPLACEMENT PARTS

ITEM	PART	DESCRIPTION
1	RAP91172	SENSING UNIT
2	RAP91932	CLEAR POLY COVER
3	RP92193	RETAINER SEAL (ONE PER RP92193)
4	SEE >	MR452005.HTML FOR SENSING UNIT MOUNTING HDWE INFORMATION
	R90924	3 AMP FUSE
	R90925	5 AMP FUSE
	R90926	7.5 AMP FUSE
	R90927	10 AMP FUSE
	R90928	15 AMP FUSE
	NOTE:	FUSES ARE SOLD IN QUANTITIES OF FIVE.

EXISTING ASSEMBLY AP #	VARIABLES		
	OPERATION	ROOMS	GLASS
AP34629	EQ VALVE, NO JACK PRESS. SW.		PROG
AP34940	NO EQ VALVE, JACK PRESS. SW.		PROG
AP35382	EQ VALVE, NO JACK PRESS. SW.	1 OR 2	PROG
AP35718	EQ VALVE, NO JACK PRESS. SW.		NORTH
AP36184	EQ VALVE, JACK PRESS. SW.	1 OR 2	SOUTH
AP36259	EQ VALVE, NO JACK PRESS. SW.	1 OR 2	NORTH
AP36937	EQ VALVE, JACK PRESS. SW.		PROG
AP37234	EQ VALVE, JACK PRESS. SW.	1 OR 2	NORTH
AP37271	EQ VALVE, JACK PRESS. SW.		NORTH
AP37272	EQ VALVE, JACK PRESS. SW.	1 OR 2	PROG
AP37610	EQ VALVE, JACK PRESS. SW.		WEST
AP39330	EQ VALVE, JACK PRESS. SW.	7 OR 8	PROG

REPLACEMENT ASSEMBLY PART #	ID DECAL PART #
RAP92654	AP34629
RAP91646	AP34940
RAP91668	AP35382
RAP92654	AP34629
RAP91771	AP37272
RAP91668	AP35382
RAP91645	AP36937
RAP91771	AP37272
RAP91645	AP36937
RAP91771	AP37272
RAP91645	AP36937
RAP92011	AP39330

THE "**GLASS**" COLUMN REFERS TO THE DIRECTION THE PLEXIGLASS SIDE OF THE CONTROL BOX IS FACING. THE FRONT OF THE COACH IS ALWAYS NORTH. "**PROG**" INDICATES THAT THIS (AP ASSEMBLY) COMES WITH A PROGRAMMABLE SENSING UNIT. REPLACEMENT ASSEMBLIES WILL HAVE PROGRAMMABLE SENSING UNITS USING JUMPERS TO RECREATE THE ORIGINAL INSTALLATION GLASS DIRECTION AND SUSPENSION VARIABLES. REFER TO INSTRUCTION SHEET SUPPLIED WITH REPLACEMENT BOX.

WHEN REPLACING AN EXISTING 325A ASSEMBLY, ORDER BY THE **REPLACEMENT "ASSEMBLY PART #"** LISTED ABOVE, UNLESS OTHERWISE AUTHORIZED BY AN HWH REPRESENTATIVE.

ORDER BY THE REPLACEMENT #, BUT BE AWARE, THAT THE ID DECAL LOCATED ON THE OUTSIDE OF THE ASSEMBLY WILL NOT REFLECT THE RAP #. THE ID DECAL WILL EITHER REFLECT THE "**EXISTING ASSEMBLY AP #**" OR THE **REPLACEMENT "ID DECAL AP #"** LISTED.