


HWH CONTROL UNIT | ELECTRONIC

“CONTROL BOX” 625S SERIES

COMPUTER / TOUCH PANEL-CONTROLLED LEVELING SYSTEMS (Air, Hyd & Air/Hyd)
METAL/PLEXI GLASS BOX | 8.50” x 11.50”

(File: MR155010.DOC | Revised: 11JUN18)

[Print Friendly PDF File](#)

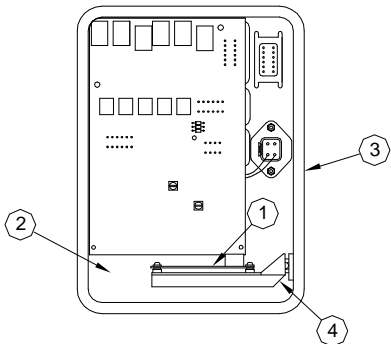

REPLACEMENT PARTS

ITEM	PART	DESCRIPTION
1	RAP91172	SENSING UNIT
2	RAP91932	CLEAR POLY COVER
3	RP92193	RETAINER SEAL (QTY 1)
4	SEE > MR452005.HTML	FOR SENSING UNIT MOUNTING HDWE INFO.
	R90925	5 AMP FUSE
	R90927	10 AMP FUSE
	R90928	15 AMP FUSE

NOTE: FUSES ARE SOLD IN QUANTITIES OF FIVE.

EXISTING ASSEMBLY AP #	VARIABLES			
	JACK STYLE	SUSPENSION	ROOMS	GLASS
AP34756-24V	SA	SPRING		SOUTH
AP35796	SA	2 JACK SYSTEM		N/A
AP36236-24V	SA	SPRING	1 OR 2	WEST
AP36467	SA	SPRING	1 OR 2	WEST
AP36595	SA	SPRING		SOUTH
AP36764	SA	AIR-DUMP	1 OR 2	NORTH
AP36765	SA	SPRING	3 OR 4	WEST
AP36769	SA	AIR-DUMP	3 OR 4	NORTH
AP36917	SA	SPRING		PROG
AP36918	SA	SPRING	1 OR 2	PROG
AP36919	SA	AIR-DUMP	1 OR 2	PROG
AP36920	SA	SPRING	3 OR 4	PROG
AP36921	SA	AIR-DUMP	3 OR 4	PROG
AP36922-24V	SA	SPRING		PROG
AP36923-24V	SA	SPRING	1 OR 2	PROG
AP37319	SA	SPRING	1 OR 2	SOUTH
AP37342-24V	SA	PROGRAMMABLE		PROG
AP37402	SA	PROGRAMMABLE		PROG
AP37501	SA	SPRING		WEST
AP37503	SA	AIR-DUMP	1 OR 2	SOUTH
AP37516	SA	SPRING	1 OR 2	EAST
AP37517	SA	SPRING	1 OR 2	WEST
AP37547	SA	PROGRAMMABLE	1 OR 2	WEST
AP37599	SA	PROGRAMMABLE	1 OR 2	PROG
AP37621	SA	AIR-DUMP		WEST
AP37629	SA	AIR-DUMP		SOUTH
AP37682	SA	AIR-DUMP		PROG
AP37703	SA	AIR-DUMP	3 OR 4	SOUTH
AP37778	SA	AIR-DUMP	1 OR 2	WEST
AP37784	SA	PROGRAMMABLE	3 OR 4	PROG
AP38073	SA	AIR-DUMP	1, 2 OR 3 W/ STEP COVER	WEST
AP38107	SA	SPRING	1 OR 2	NORTH
AP38236	SA	AIR-DUMP	1 OR 2	EAST
AP38247	SA	AIR-DUMP	3 OR 4	EAST
AP39658	SA	SPRING	3 OR 4	SOUTH
AP39890	SA	AIR-DUMP	* 3 OR 4	WEST
AP39936	SA	AIR-DUMP		EAST
AP40215	SA	SPRING		NORTH

REPLACEMENT ASSEMBLY PART #	ID DECAL PART #
RAP91767	AP36922
RAP91743	AP35796
RAP91768	AP36923
RAP91763	AP36918
RAP91762	AP36917
RAP91764	AP36919
RAP91765	AP36920
RAP91766	AP36921
RAP91762	AP36917
RAP91763	AP36918
RAP91764	AP36919
RAP91765	AP36920
RAP91766	AP36921
RAP91767	AP36922
RAP91768	AP36923
RAP91763	AP36918
RAP91811	AP37342
RAP91812	AP37402
RAP91762	AP36917
RAP91764	AP36919
RAP91763	AP36918
RAP91763	AP36918
RAP91814	AP37599
RAP91814	AP37599
RAP91810	AP37682
RAP91810	AP37682
RAP91810	AP37682
RAP91766	AP36921
RAP91764	AP36919
RAP91813	AP37784
RAP92013	AP38073
RAP91763	AP36918
RAP91764	AP36919
RAP93318	AP38247
RAP91765	AP36920
RAP91766	AP36921
RAP91810	AP37682
RAP91762	AP36917

AP40514	SA	SPRING	1, 2 OR 3 W/ STEP COVER	WEST
AP40940	SA	AIR-DUMP		NORTH
AP41004	SA	SPRING	1, 2 OR 3 W/ STEP COVER	PROG
AP41034	SA	SPRING	4 OR 5 W/ STEP COVER	PROG
AP41211	SA	REM. SENS.-DUMP		N/A
AP41276	SA	REM. SENS.-DUMP	1 OR 2	N/A
AP43159	SA	SPRING	3 OR 4	NORTH
AP43478-24V	SA	REM. SENS.-SPRING		N/A
AP44468-24V	SA	AIR-DUMP	1 OR 2	PROG
AP47154	SA	SPRING		EAST

RAP92204	AP41004
RAP91810	AP37682
RAP92204	AP41004
RAP92205	AP41034
RAP92208	AP41211
RAP92209	AP41276
RAP91765	AP36920
RAP92321	AP43478
RAP92975	AP44468
RAP91762	AP36917

* NOTE: AP39890 MUST HAVE ACCESSORY OR IGNITION POWER TO OPERATE THE ROOMS. THE REPLACEMENT BOX WILL OPERATE THE ROOMS IN ANY KEY POSITION.

THE "**GLASS**" COLUMN REFERS TO THE DIRECTION THE PLEXIGLASS SIDE OF THE CONTROL BOX IS FACING. THE FRONT OF THE COACH IS ALWAYS NORTH. "**N/A**" INDICATES THIS ASSEMBLY HAS NO SENSING UNIT. "**PROG**" INDICATES THAT THIS (AP ASSEMBLY) COMES WITH A PROGRAMMABLE SENSING UNIT.

REPLACEMENT ASSEMBLIES WILL HAVE PROGRAMMABLE SENSING UNITS USING JUMPERS TO RECREATE THE ORIGINAL INSTALLATION GLASS DIRECTION AND SUSPENSION VARIABLES. REFER TO INSTRUCTION SHEET SUPPLIED WITH REPLACEMENT BOX.

WHEN REPLACING AN EXISTING 625S ASSEMBLY, ORDER BY THE **REPLACEMENT "ASSEMBLY PART #"** LISTED ABOVE UNLESS OTHERWISE AUTHORIZED BY AN HWH REPRESENTATIVE.

ORDER BY THE REPLACEMENT #, BUT BE AWARE, THAT THE ID DECAL LOCATED ON THE OUTSIDE OF THE ASSEMBLY WILL NOT REFLECT THE RAP #. THE ID DECAL WILL EITHER REFLECT THE "**EXISTING ASSEMBLY AP#**" OR THE **REPLACEMENT "ID DECAL AP#"** LISTED.